

Jauge niveau WIFI TANKALERT

Manuel de connexion
à un réseau WiFi



1. Réglage du WiFi Tankalert

L'appareil est livré préconfiguré d'usine. La seule opération à effectuer par l'utilisateur consiste donc à configurer son mot de passe réseau Wi-Fi local à l'aide du capteur à connecter pour obtenir un accès Internet.


Pas:

1. Appuyez sur le bouton de «hotspot» et maintenez-le enfoncé pendant 5 secondes pour lancer le mode d'approvisionnement: le voyant rouge s'allume de manière continue..



S'il n'y a pas d'interaction avec l'appareil pendant 5 minutes, le voyant s'éteindra et l'appareil retournera en mode basse consommation.


2. Pendant que le mode de provisionnement est actif (voyant rouge), nous vérifierons qu'un nouveau réseau Wi-Fi a été activé dans notre système:

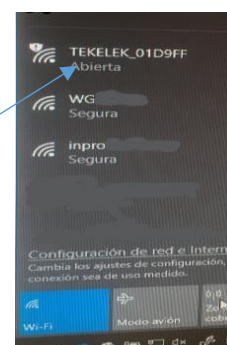

3. Une fois connecté depuis un autre appareil au réseau WiFi «TEKELEK_XXXXXX», vous devez ouvrir un navigateur Web à cette vitesse et taper:


<http://192.168.4.1>

4. La page Web intégrée de l'unité et à partir de là, vous la configurez sur le réseau wifi avec le nom et le mot de passe wifi. Vous recevrez ce message :

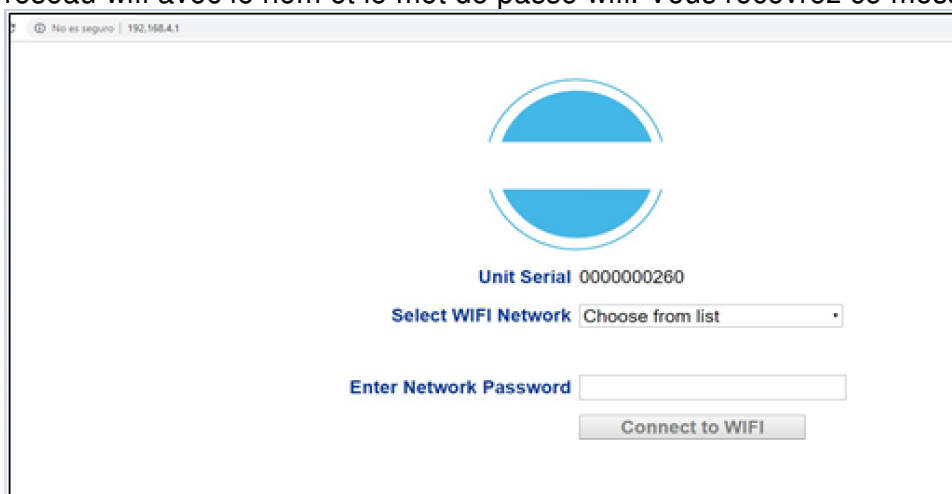


The screenshot shows a web browser window with the address bar displaying "No es seguro | 192.168.4.1". The main content area features a large blue circular logo with a white horizontal line through the center. Below the logo, the text "Unit Serial 0000000260" is displayed. Underneath, there is a label "Select WIFI Network" followed by a dropdown menu currently showing "Choose from list". Below this is a label "Enter Network Password" followed by a text input field. At the bottom right, there is a button labeled "Connect to WIFI".

en sélectionnant le WiFi local:

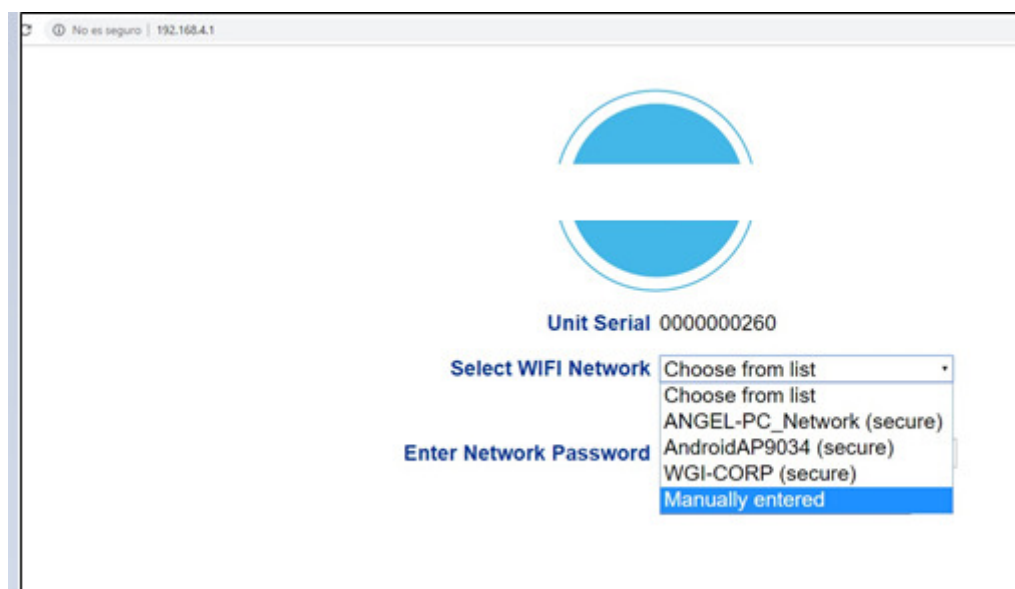


This screenshot is similar to the previous one, but the dropdown menu for "Select WIFI Network" is open, showing a list of available networks. The list includes "Choose from list" (twice), "ANGEL-PC_Network (secure)", "AndroidAP9034 (secure)", "WGI-CORP (secure)", and "Manually entered" (which is highlighted in blue). The rest of the interface, including the logo, unit serial number, password field, and connect button, remains the same.

Et mot de passe:

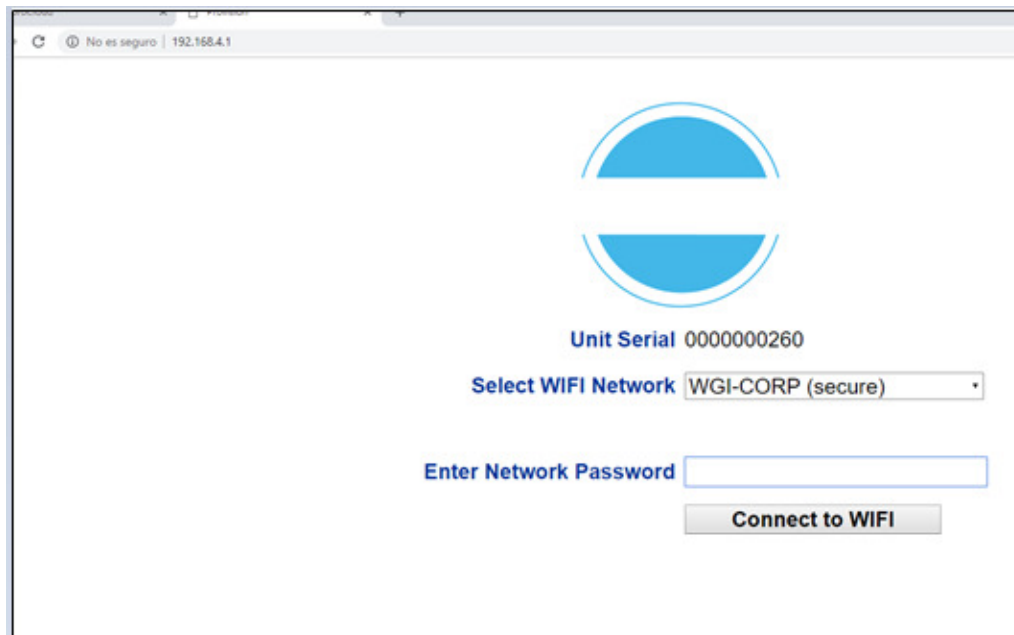

A screenshot of a web browser window showing a WiFi configuration page. The address bar indicates the URL is 192.168.4.1. The page features a large blue circular logo at the top. Below the logo, the text "Unit Serial 0000000260" is displayed. Underneath, there is a dropdown menu labeled "Select WIFI Network" with "WGI-CORP (secure)" selected. Below the dropdown is a text input field labeled "Enter Network Password". At the bottom right, there is a button labeled "Connect to WIFI".

Et en cliquant sur le bouton «Connect to WiFi», on voit

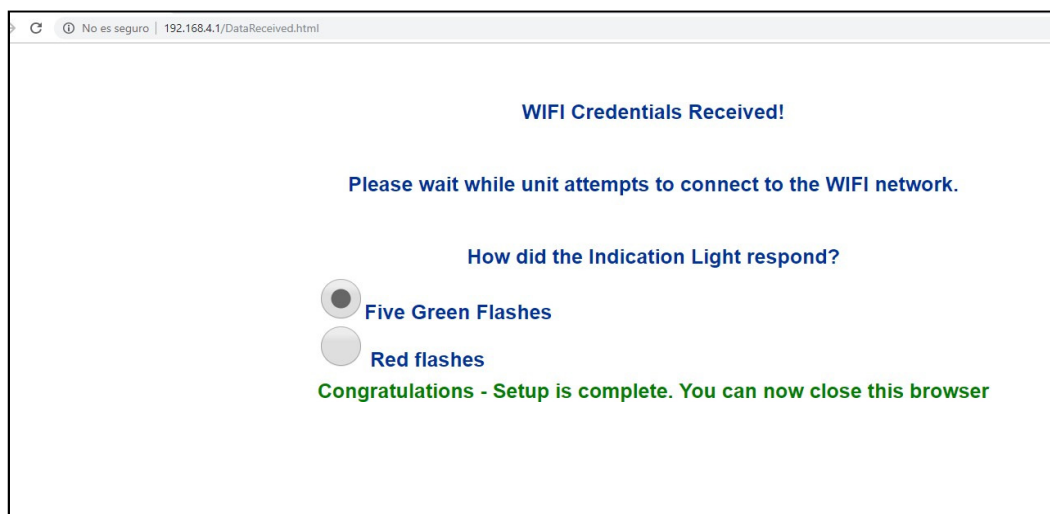

A screenshot of a web browser window showing a confirmation page after clicking "Connect to WiFi". The address bar shows the URL 192.168.4.1/DataReceived.html. The page displays the following text: "WIFI Credentials Received!" in blue, followed by "Please wait while unit attempts to connect to the WIFI network." in blue. Below this, a question "How did the Indication Light respond?" is shown. Two radio buttons are present: the first is selected and labeled "Five Green Flashes", and the second is unselected and labeled "Red flashes". At the bottom, a green message states: "Congratulations - Setup is complete. You can now close this browser".

- **“5 clignotements verts”**: appareil correctement connecté au WiFi local
- **D’autres nombre de clignotements verts**: veuillez vous référer à la liste des codes de LED d’erreurs.

2. Codes d'erreur LED

- **1 clignotement** - Impossible de trouver le réseau Wi-Fi (ou la configuration Wi-Fi incomplète).
 - **2 clignotements** - connexion impossible au réseau Wi-Fi (signal médiocre, filtrage MAC ou parfois mot de passe incorrect).
 - **3 clignotements** - Mot de passe Wi-Fi incorrect.
 - **4 clignotements** - Serveur non disponible (aucun service Web à l'écoute sur l'URL / port du serveur).
 - **5 clignotements** - Pas de réponse du serveur (données envoyées, mais rien n'a été reçu).
 - **6 clignotements** - Réponse non valide au serveur (c'est-à-dire une réponse HTTP 404 renvoyée).
 - **7 clignotements** - Échec du téléchargement du micrologiciel (délai expiré, type introuvable ou incorrect).
 - **8 clignotements** : batterie faible (une batterie épuisée finira par empêcher les connexions Wi-Fi).
 - **9 clignotements** - Module Wi-Fi sans réponse (défaut critique).
-